


Remote control for soap dispensers

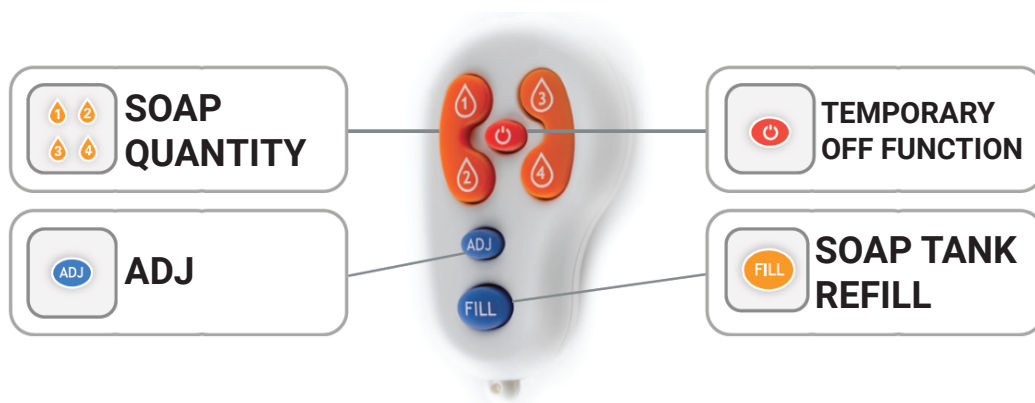

Remote control RES-38 to adjust the soap dispenser settings.

To use the remote control, place it in front of the sensor at a distance around 10-15 cm.

Be careful: holding the remote control away from the recommended distance (too close or too far) can interfere with its correct function.

	1- SOAP QUANTITY
	Soap quantity: allows the user to choose the desired soap quantity*.
	<div> ① 0.7 to 0.9 cc ② 1.2 to 1.6 cc ③ 1.6 to 1.9 cc ④ 2.1 to 2.3 cc </div>
	Indication: blue light flashes continuously in the sensor. *the exact quantity depends on the soap viscosity.
	2- RESET
	To reset the factory soap quantity, press ADJ. Indication: 2 blue flashes within the sensor.
	3- TEMPORARY OFF FUNCTION
	Function allows any activity in front of the sensor without it triggering (for example, for cleaning). 1 minute stop. Either wait 1 minute or press the button again to restart.
	Indication: STOP = 2 quick flashes START = 4 quick flashes
	4- SOAP TANK REFILL
	Once the soap bottle has been refilled, press the FILL button. The pump works 1 minute until the soap flows from the spout. Press the FILL button again to stop the flow.

