

SUPRATECH

HYGIENE ON THE MOVE!



HYGISEAT


**WALL-HUNG RIMLESS
AUTOMATIC WC**

INSTALLATION AND MAINTENANCE GUIDE

HYGISEAT wall-hung rimless WC


Ref. SUP1600

1 pers.

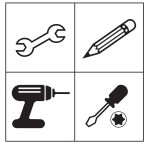

1 - PREPARATION


1 SETTING UP THE SUPPORT FRAME (Geberit instructions)

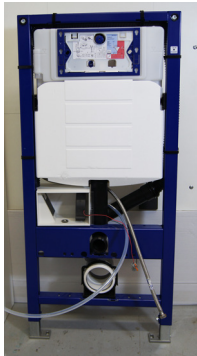

- Water inlet connected
- Drainage connected
- Power supply on standby

Plan for a standby socket for a 230/12V transformer Class II.

2 TRADITIONAL WALL CLADDING AND TILING OR HYGISEAT PANNELLING

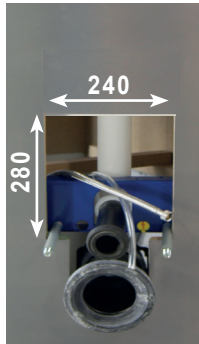

Connection access
Height 280 mm
Width 240 mm


Measurements taken from the 2 threaded rods.

3 INSTALLING THE MANUAL FLUSH CONTROL (Geberit instructions)



2 - SECURING THE PAN AND MOTOR


4 POSITION THE 2 THREADED RODS 70 MM FROM FINISHED WALL

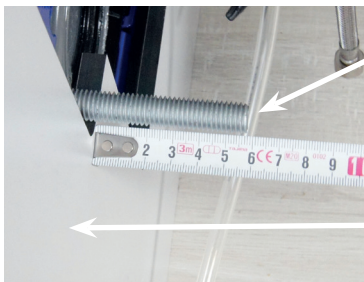

THREADED ROD

FINISHED WALL

5 POSITION THE RECESS IN THE PAN FIXINGS 110 MM FROM THE FINISHED WALL

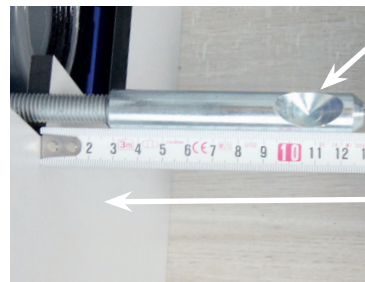

PAN FIXING

FINISHED WALL

6 INSTALLING THE PAN (geberit instructions)

a. After installing the sleeves with lip seal, secure the bowl to the wall mount.



Check level.



7 SECURING THE PAN

a. Secure the pan using the 6 mm Allen key (15 mm max).



b. Insert hole covers.



8 SECURE THE SEAT ROTATION MOTOR




Insert and tilt the motor to position it onto the seat plate.

9 CLIP THE MOTOR SUPPORT INTO PLACE



3 - SETTING UP THE TECHNICAL PANEL

10 INSTALLING THE PANEL

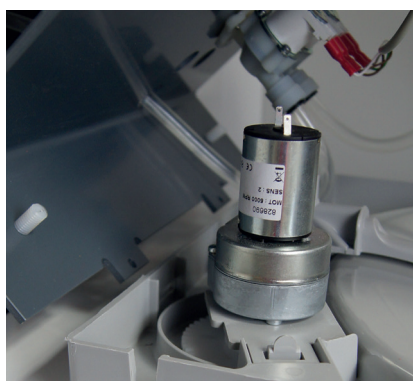

Insert the two tabs into the slots of the seat panel.

11 ROUTING OF THE 12V CABLE THROUGH THE BACK OF THE PANEL



Plug the transformer into the socket.

12 CONNECTING THE CABLE BETWEEN THE TANK AND THE PCB




Connect the bare electrical wire to the cable with WAGO connectors at the back of the panel.

13 CONNECTING THE HOSE TO THE QUICK CONNECT SOLENOID VALVE FITTING



14 CONNECTING THE WIRE BETWEEN THE TANK AND SOLENOID VALVE


Connect the wire with terminals to the wire connected to the solenoid valve.

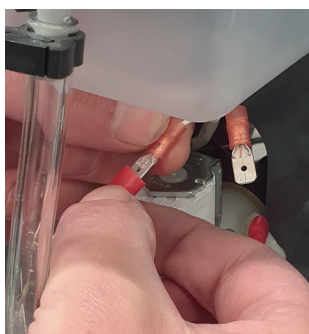

Match the colours:
White - White ; Brown - Brown



15 PREPARATION FOR WALL MOUNTING

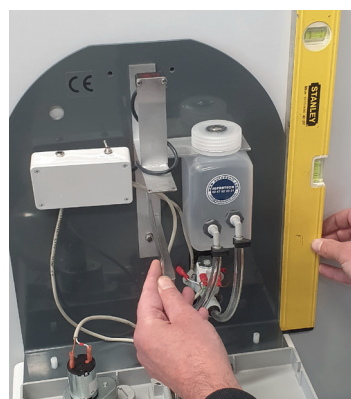

CAUTION
do not puncture the tank

- Using a pencil, mark the placement of the 2 screws.
- Remove the panel and drill the holes.
- Put in the dowels.

16 SCREWING PANEL TO THE WALL



Insert the 2 tapered pins into the tabs.




4 - CONNECTIONS


14 CONNECTING THE 12V CONNECTOR



15 CONNECTING THE MOTOR WIRE WITH RED MARKING ONTO THE (RED) + TERMINAL

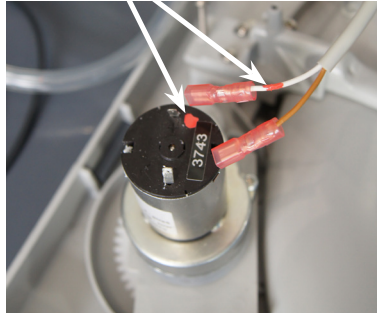

16 CONNECTING THE CLEANING STATION

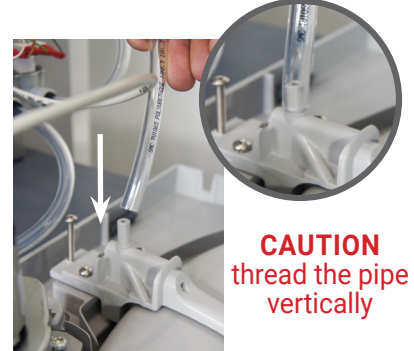

CAUTION
thread the pipe
vertically



- ✓ Pan inlet and outlet
- ✓ Solenoid valve water inlet
- ✓ Flush command
- ✓ 12V supply to PCB box and 230V connection on support frame side
- ✓ Cleaning station
- ✓ Installation of the manual flush command (Geberit instructions)
- ✓ Setting up the disinfectant
- ✓ ON switch
- ✓ Sensor tests
- ✓ Leak check

SUPRATECH

**INSTALLATION
ASSISTANCE**

00 33 (0)2 47 92 23 31



When powering up, switch to the ON position (indicated by 3 beeps) before placing the hood back on.

17 OPENING / CLOSING THE HOOD

1. Turn the triangle key.
2. Push the hood towards the wall.
3. Slide the hood vertically behind the panel, either upwards or downwards.

Be careful not to damage the toilet seat.



18 REPLACING THE DISINFECTANT SOLUTION

- Before opening the mixer, switch it OFF
- After closing the mixer, switch it back ON (= 3 beeps).



11.2024