

SUPRATECH

RIVAGE wall-mounted washbasin with backsplash, wall-mounted support and brackets

References: **LVA-1800-D / IS-JP180**

Step 1: installing the support on the wall

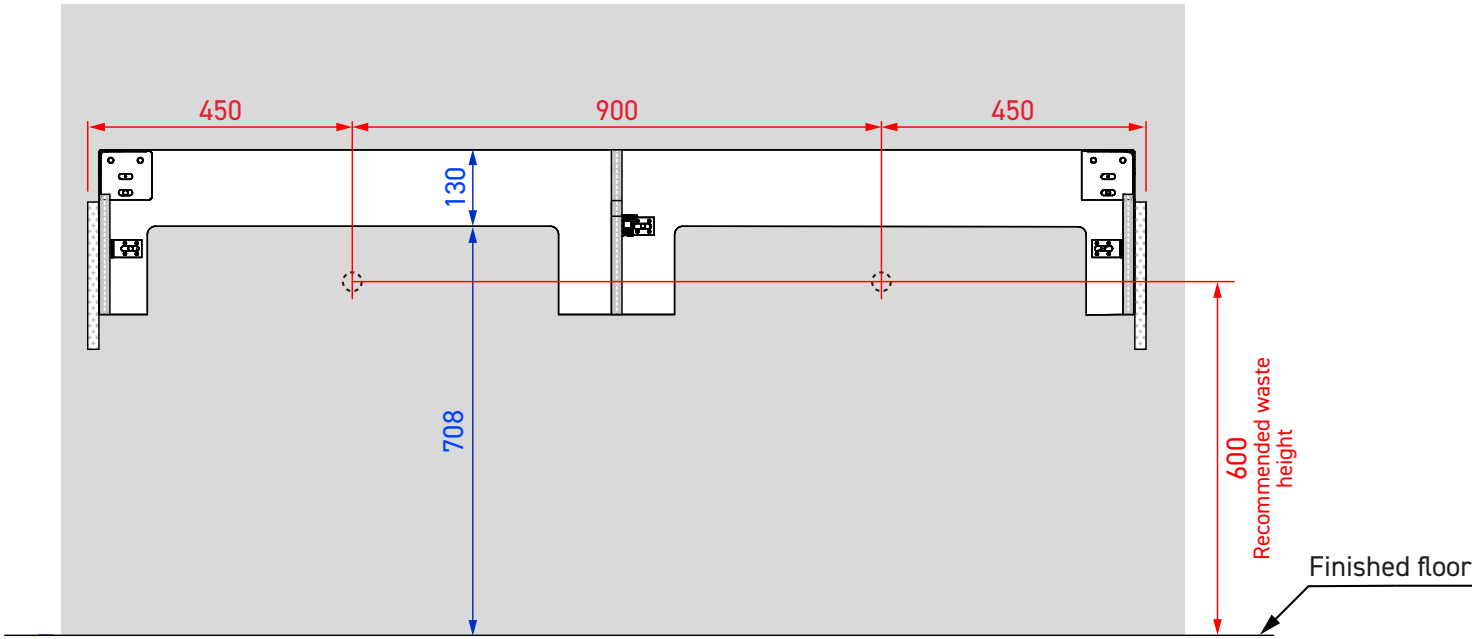

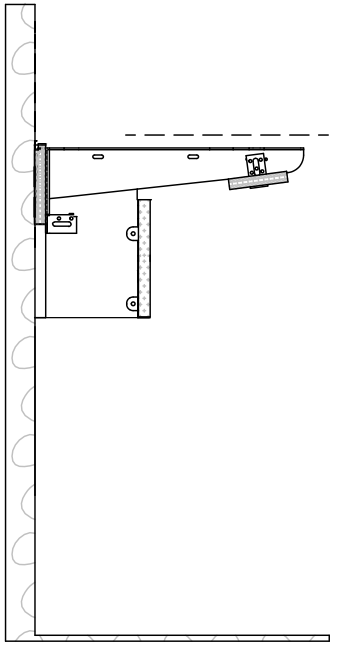

Wall-mounted support:

Fixing recommended on the brackets (pre-holes Ø8).

Provison for Ø6x70 hinge screws for reinforcement at the edge of the brackets, using the outermost holes.



18 mm hydro polywood back spanning the full width of the washbasin support: allowing it to be fixed on the rails regardless of their position.

In addition: apply a few spots of polyurethane glue on the back of the support.

Provision for 18 mm polywood or OSB reinforcement between the rails for washbasin mounting on lightweight wall. Height 600 - 900 mm on fixing points. **IMPORTANT:** the reinforcement must be secured to the rail.


Recommended height
for bottom of the mirror unit 1100 mm above floor
=> bottom of mirror unit 250 mm above washbasin
=> top of washbasin 850 mm above floor

SUPRATECH

RIVAGE wall-mounted washbasin with backsplash, wall-mounted support and brackets

References: **LVA-1800-D / IS-JP180**

Step 2 : installing the washbasin on the support

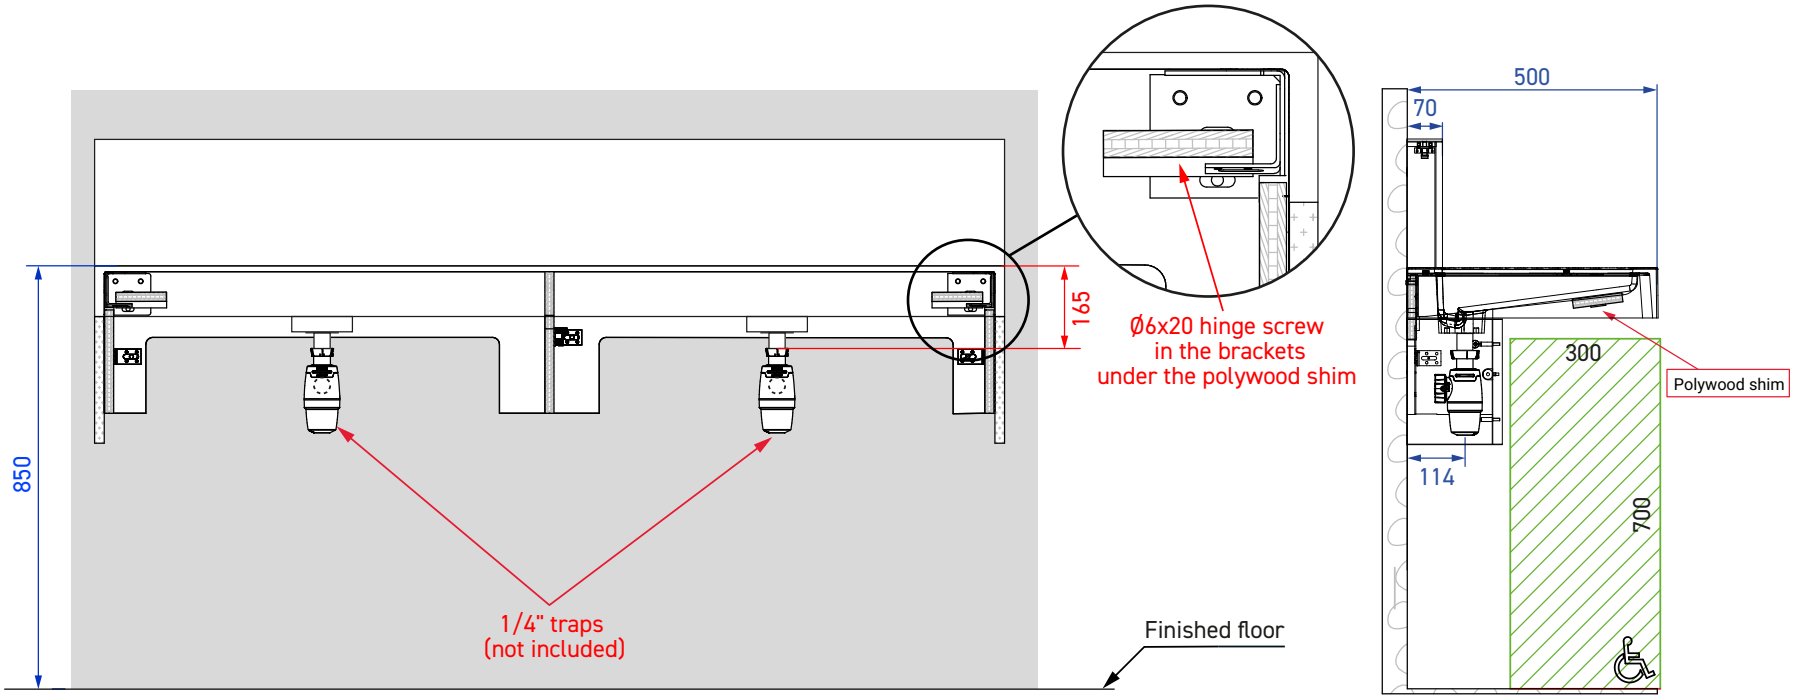

Installing the washbasin on the support:

Fix the washbasin to the brackets with Ø6x20 mm hinge screws through the polywood shims (x2).



Connect the 1 1/4" traps (not included).

IMPORTANT: apply a silicone seal between the washbasin and the wall.

68 KG

Recommended height
for bottom of the mirror unit 1100 mm above floor
=> bottom of mirror unit 250 mm above washbasin
=> top of washbasin 850 mm above floor

+33 (0)2 47 92 23 31
info@autosanit.com
www.autosanit.com