

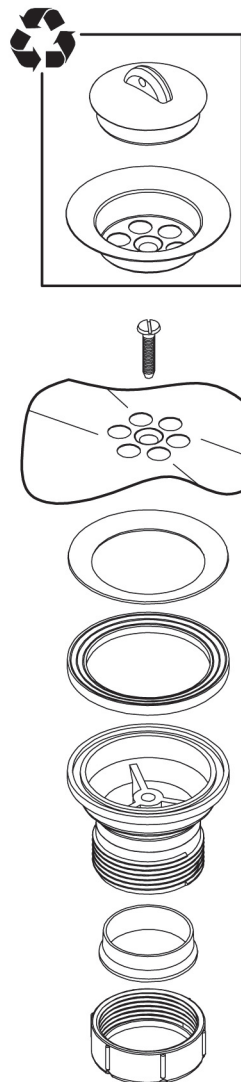
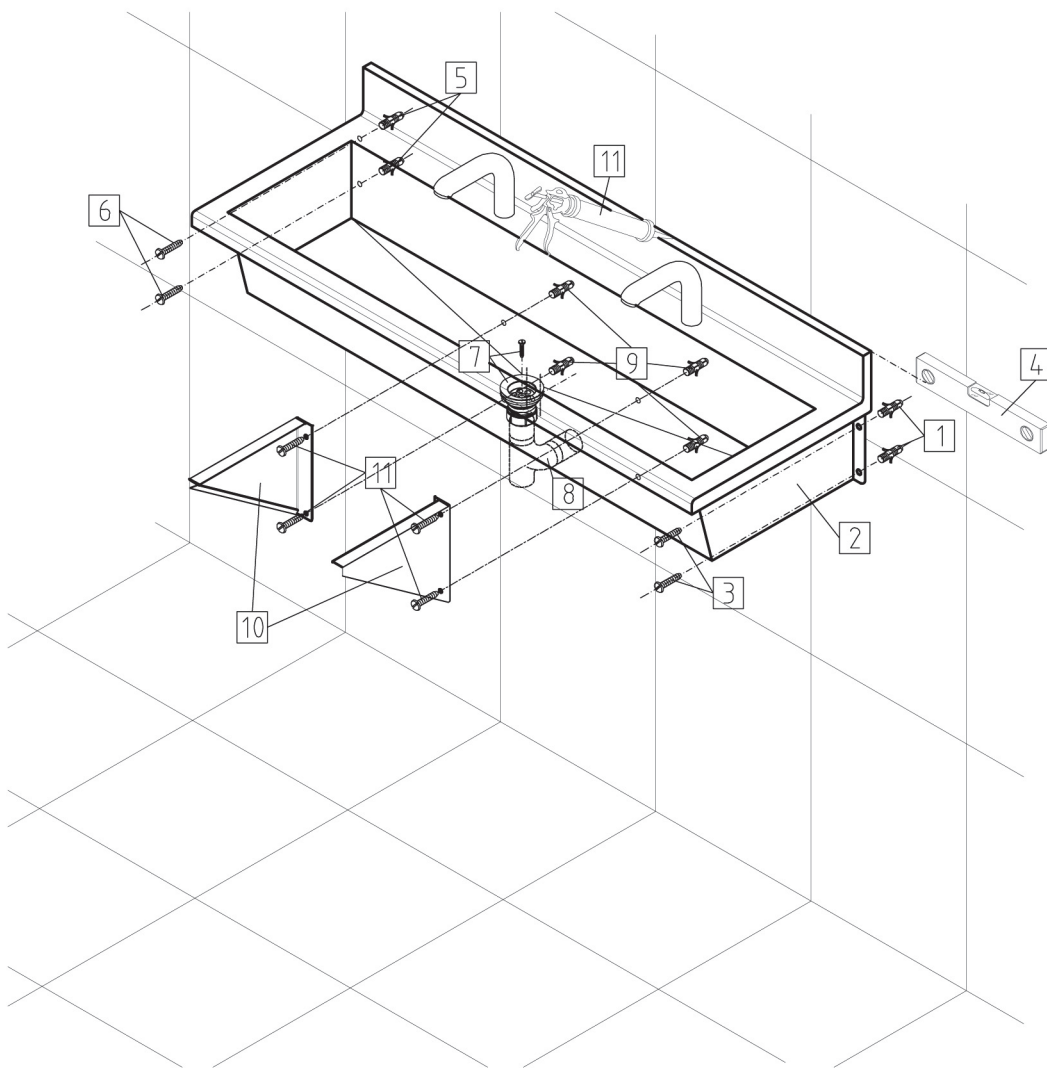


Instructions de montage

Lavabo LVC-P-600/1200/1800/2400

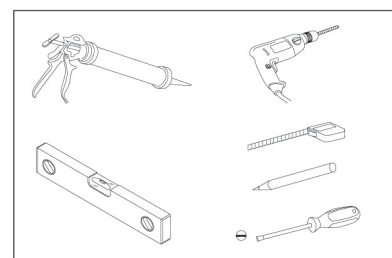

Montage
bonde 1 1/2"

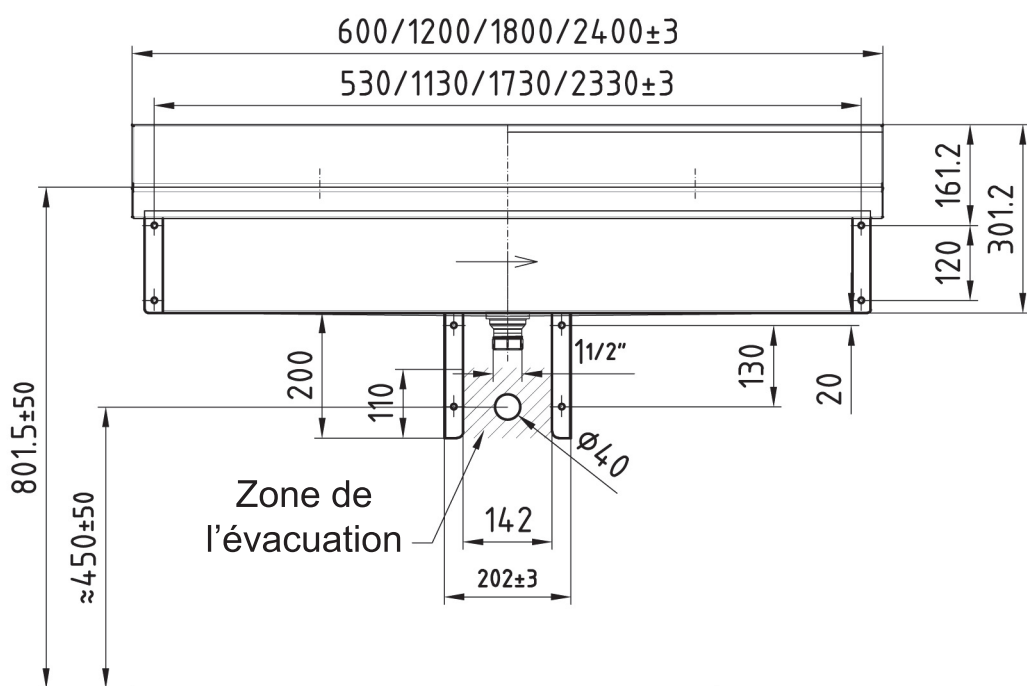

	1x	✓
	1x	✓
 1 1/2"	1x	✓
	1x	✗
	8x	✗
	8x	✗