


SUPRATECH

HYGIENE ON THE MOVE!

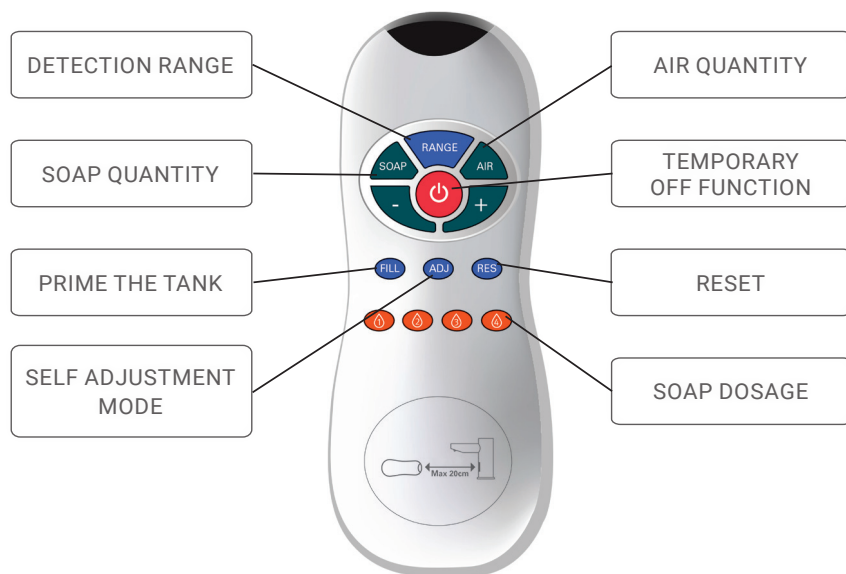

SOAP & WATER RES-30 REMOTE CONTROL

The Eau & Savon remote control allows for easy maintenance of electronic systems that require specific adjustments.

Important advantage = the last setting made by the remote control is retained in the memory of the PCB, even in the event of a power cut or battery change.

NOTE: Functions apply to compatible models only.

Place the remote control facing the tap sensor at a distance of about 15 - 20 cm.

WARNING: If held outside the recommended range, the remote control will not work.



TEMPORARY OFF FUNCTION:

The temporary off function is ideal for performing any activity in front of the sensor without operating the system (e.g., cleaning).

Faucets and soap dispensers remain closed for 1 minute when this button is pressed once.

To deactivate this function and return to normal operations, press the **ON/OFF** button again or wait for 1 minute.



RESET:

The reset function allows the sensor to return to the original factory settings. If your faucet has self-adjusting detection, the **RESET** button restores all factory settings except for the detection range.

Use the **ADJ** button to activate the self-adjustment mode.

If needed, the detection length can be adjusted as follows:

Press the **RANGE** button.

Press and hold down the **RESET** button and, at the same time, press the **(+)** button once.



DETECTION RANGE:

The detection range represents the optimum distance at which a person or hand must be placed to trigger the system.

The detection range on faucets with self-adjusting detection can be changed using this button.

If needed, the detection range can be adjusted as follows:

Press the **RANGE** button. Wait for the blue LED to flash on the sensor. Then press **(+)** to increase the range and **(-)** to decrease it.



SELF ADJUSTMENT MODE:

This button only works on products with a self-adjusting sensor.

To activate, first ensure that no objects are in front of the sensor.

Press the **ADJ** button and wait for a quick flashing of the sensor's LED. Remove your hand holding the remote control and move away from the detection area.

The ideal detection range will be set automatically.

Opening of the solenoid valve for 1 second to indicate that the adjustment is complete and the faucet is ready for use.

	SOAP DOSAGE: <u>This function button operates liquid soap dispensers only.</u> Use the 1-4 drop buttons to select the desired soap dosage in cm³. <table><tr><td> 0.7 to 0.9</td><td> 1.2 to 1.6</td><td> 1.6 to 1.9</td><td> 2.1 to 2.3</td></tr></table> During adjustment, the sensor's blue LED will flash continuously to confirm the setting change. The exact dosage will vary depending on the soap viscosity.	 0.7 to 0.9	 1.2 to 1.6	 1.6 to 1.9	 2.1 to 2.3
 0.7 to 0.9	 1.2 to 1.6	 1.6 to 1.9	 2.1 to 2.3		
	SOAP QUANTITY: <u>This function button operates foam soap dispensers only.</u> Press the SOAP button to adjust the amount of soap dispensed per use. If needed, the soap quantity can be adjusted as follows: Press the SOAP button. Wait for the blue LED to flash on the sensor. Then, press (+) to increase the soap quantity or (-) to reduce it.				
	AIR QUANTITY: <u>This function button operates foam soap dispensers only.</u> Press the AIR button to adjust the foam air ratio and foam-ability of the soap. If needed, the air quantity can be adjusted as follows: Press the AIR button. Wait for the blue LED to flash on the sensor. Then, press (+) to increase the air quantity or (-) to reduce it.				
	SOAP TANK PRIMING: <u>This function button operates foam/liquid soap dispensers only.</u> Once the soap tank has been filled/re-filled, press the FILL button. The pump will operate for one minute to initiate the soap flow through the dispenser spout. To stop this activity, press the FILL button again. If the soap has not started dispensing from the spout, press the FILL button again.				

SUPRATECH

AUTOMATED SYSTEMS - SANITARY ACCESSORIES - STAINLESS STEEL SANITARY WARE

2, rue des Cyprès - 37240 Bossée - France

Tél : 02 47 92 23 31 - Fax : 02 47 92 84 71

info@autosanit.com

www.autosanit.com

