

SUPRATECH

HYGIENE ON THE MOVE!




HYGISEAT

**WALL-HUNG SELF-CLEANING
AUTOMATIC WC**

INSTALLATION AND MAINTENANCE GUIDE

HYGISEAT wall-hung WC

Ref. SUP1050

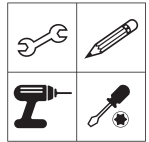

1 pers.

1 - PREPARATION


1 SETTING UP THE SUPPORT FRAME (Geberit instructions)



- Water inlet connected
- Drainage connected
- Power supply on standby

Plan for a standby socket for a 230/12V transformer Class II.

2 TRADITIONAL WALL CLADDING AND TILING OR HYGISEAT PANNELLING

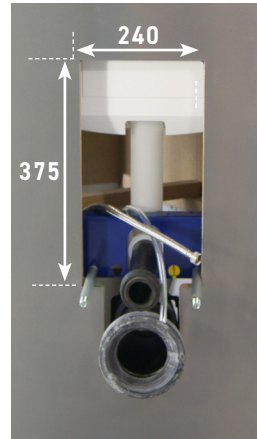


Fix the pan support panel to the threaded rods on the frame using washers and nuts.

Connection access
Height 375 mm
Width 240 mm

Measurements taken from the 2 threaded rods.

3 INSTALLING THE PAN (Geberit instructions)

a. Fix the pan to the wall support using 6 anti-theft Torx screws.

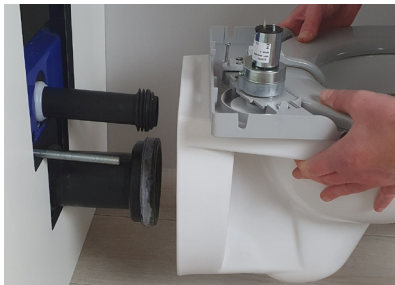

b. Check level.



4 INSTALLING MANUAL FLUSH CONTROL (Geberit instructions)





2 - SETTING UP THE TECHNICAL PANEL

5 INSTALLING THE PANEL



Insert the two tabs into the slots of the seat panel.

6 CONNECTING THE CABLE BETWEEN THE TANK AND PCB

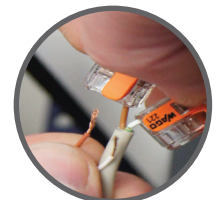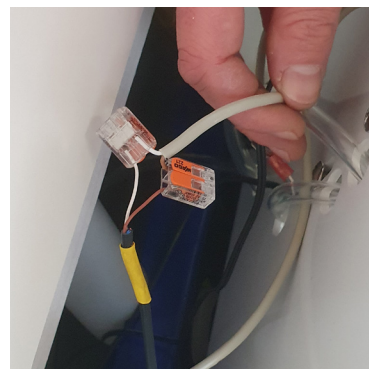


Connect the bare electrical wire to the cable with WAGO connectors at the back of the panel.

7 CONNECT THE HOSE TO THE QUICK CONNECT SOLENOID VALVE FITTING



8 CONNECTING THE WIRE BETWEEN THE TANK AND SOLENOID VALVE


Connect the wire with terminals to the wire connected to the solenoid valve.

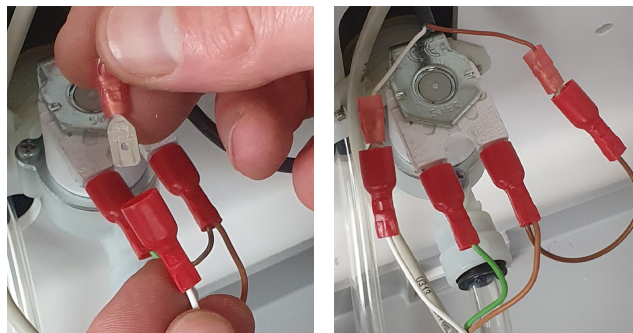

Match the colours:
White - White
Brown - Brown

9 CONNECTING THE 12V CONNECTOR

a. Connect the 12V wire to the box (= 4 beeps).

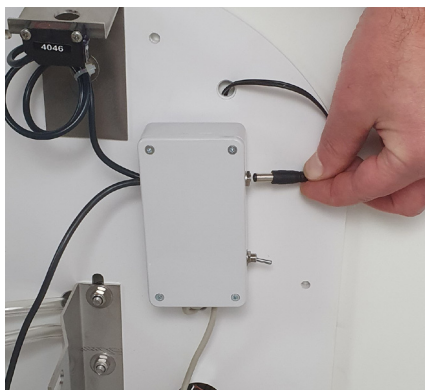

10 SCREWING THE PANEL TO THE WALL

Mark the placement of the 2 screws, remove the panel, then drill and put in dowels.




b. Level and screw panel to the wall.




CAUTION do not puncture the tank

3 - CONNECTIONS

11 CONNECTING THE MOTOR WIRE WITH RED MARKING ONTO THE (RED) + TERMINAL

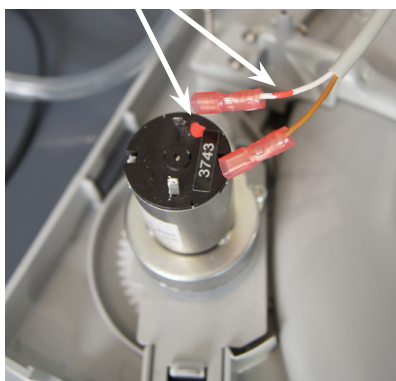

12 CONNECTING THE CLEANING STATION

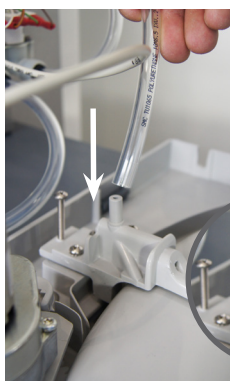

CAUTION
thread the
pipe vertically

13 CONNECTING THE SENSOR CELL BELOW THE HOOD



4 - CONNECTIONS



- ✓ Pan inlet and outlet
- ✓ Solenoid valve water inlet
- ✓ Flush command
- ✓ 12V supply to PCB box and 230V connection on support frame side
- ✓ Cleaning station
- ✓ Installation of the manual flush command (Geberit instructions)
- ✓ Setting up the disinfectant
- ✓ ON switch
- ✓ Sensor tests
- ✓ Leak check

SUPRATECH

**INSTALLATION
ASSISTANCE**

00 33 (0)2 47 92 23 31



When powering up, switch to the ON position (indicated by 3 beeps) before placing the hood back on.

17 OPENING / CLOSING THE HOOD

1. Turn the triangle key.
2. Push the hood towards the wall.
3. Slide the hood vertically behind the panel, either upwards or downwards.

Be careful not to damage the toilet seat.



18 REPLACING THE DISINFECTANT SOLUTION

- Before opening the mixer, switch it OFF
- After closing the mixer, switch it back ON (= 3 beeps).



11.2024