

SUPRATECH

HYGIENE ON THE MOVE!



HYGISEAT

**WALL-HUNG STAINLESS STEEL
WC FOR PMR**


INSTALLATION AND MAINTENANCE GUIDE

HYGISEAT wall-hung WC for PRM

Ref. SUP1106

1 - PREPARATION

 1 pers.

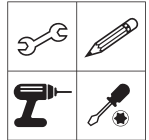


1 SETTING UP THE SUPPORT FRAME (in accordance with Geberit instructions)



- Water inlet connected
- Drainage connected
- Power supply on standby

Provide a standby socket for a 230/12V transformer. Class II.

2 TRADITIONAL WALL CLADDING AND TILING OR HYGISEAT PANNELLING

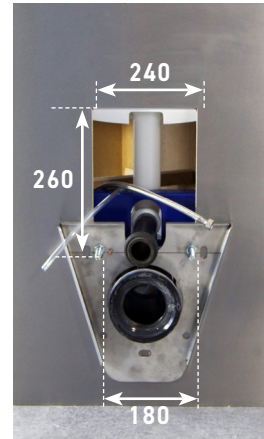

Secure the pan's wall support onto the threaded rods of the frame using washers and nuts.

Connection access
Height 260 mm
Width 240 mm
Drainage
Width 180 mm

Measurements taken from the 2 threaded rods.

3 MOUNTING THE PAN (Geberit instructions)

- a. Fasten the stainless steel pan onto the wall support using 6 Torx security screws.



- b. Check the level.



4 INSTALLING THE MANUAL FLUSH CONTROL (Geberit instructions)




2 - SETTING UP THE TECHNICAL PLATE

5 INSTALLING THE PLATE



Insert the two tabs into the slots of the seat plate.


6 CONNECTING THE CABLE BETWEEN THE RESERVOIR AND PCB, AND PLUGGING THE 12V TRANSFORMER INTO THE SOCKET

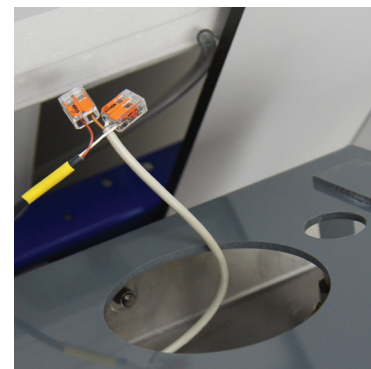

Connect the bare electrical wires to the cable with WAGO connectors, passing through the central hole at the back of the plate.




7 CONNECTING THE HOSE TO QUICK-CONNECT FITTING OF THE SOLENOID VALVE THROUGH CORRESPONDING HOLE.

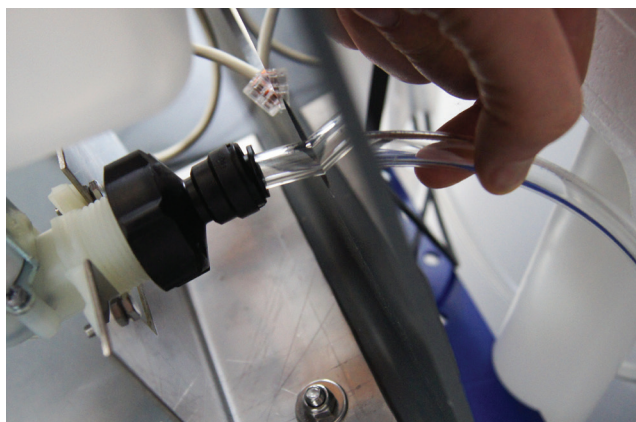

8 CONNECTING THE CABLE BETWEEN RESERVOIR AND THE SOLENOID VALVE

Connect the cable with terminals to the cable attached to the solenoid valve, passing through the same hole.

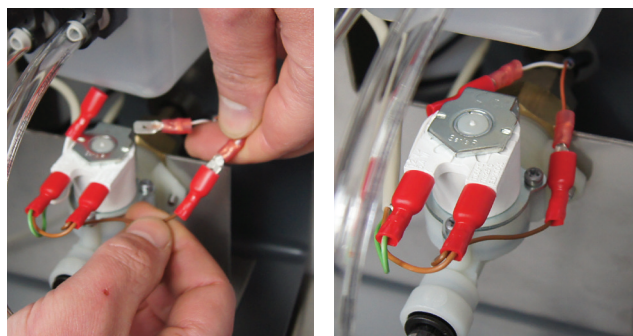

Match colours up:
White - White
Brown - Brown

9 CONNECTING THE 12V POWER SUPPLY


a. Connect the 12V wire to the PCB box (= 4 beeps).

b. Attach the box to the velcro.




10 MOUNTING THE PLATE TO THE WALL

a. Mark the placement of the 2 screws, remove the plate, then drill and put in dowels.

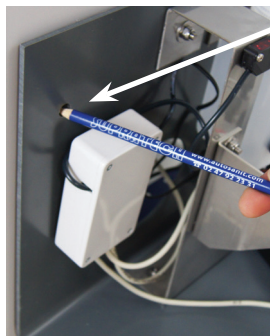


b. Screw the plate to the wall.

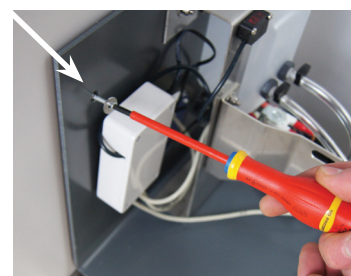


CAUTION do not perforate the reservoir

3 - CONNECTIONS

11 CONNECTING THE MOTOR WIRE WITH RED MARKING ONTO THE (RED) + TERMINAL

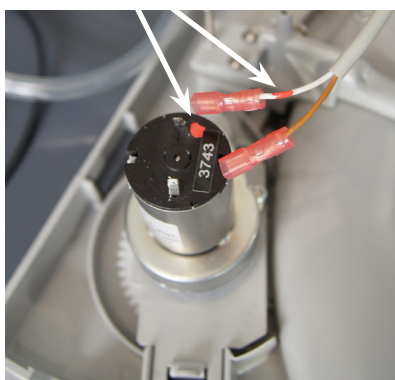

12 CONNECTING THE CLEANING STATION

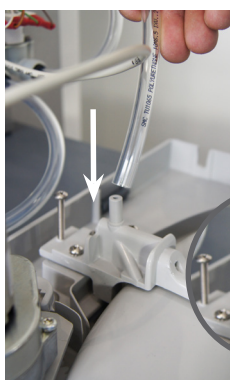


CAUTION
Thread the pipe vertically

13 CONNECTING THE SENSOR UNDER THE HOOD



4 - VERIFICATIONS

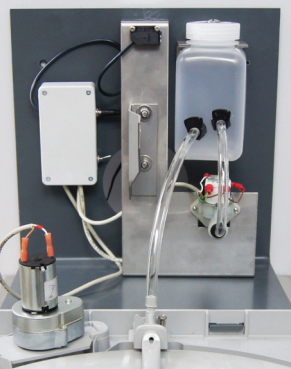

- ✓ Pan inlet and outlet
- ✓ Solenoid valve water inlet
- ✓ Flush command
- ✓ 12V supply to PCB box and 230V connection on support frame side
- ✓ Cleaning station
- ✓ Installation of the manual flush command (Geberit instructions)
- ✓ Setting up the disinfectant
- ✓ ON switch
- ✓ Sensor tests
- ✓ Leak check

SUPRATECH

**INSTALLATION
ASSISTANCE**

00 33 (0)2 47 92 23 31



When powering up,
switch to the ON position
(indicated by 3 beeps)
before placing the hood
back on.

14 OPENING / CLOSING THE HOOD

1. Turn the triangle key.
2. Push the hood towards the wall.
3. Slide the hood vertically behind the plate, either upwards or downwards.

Be careful not to damage the toilet seat.



15 REPLACING THE DISINFECTANT SOLUTION

- Before opening the mixer, switch it OFF.
- After closing the mixer, switch it back ON (= 3 beeps).

