

SUPRATECH

HYGIENE ON THE MOVE!



HYGISEAT


WALL-HUNG AUTOMATIC WC

INSTALLATION AND MAINTENANCE GUIDE

HYGISEAT DESIGN wall-hung WC


Ref. SUP1500

1 pers.

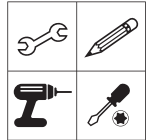

1 - PREPARATION


1 SETTING UP THE SUPPORT FRAME (Geberit instructions)

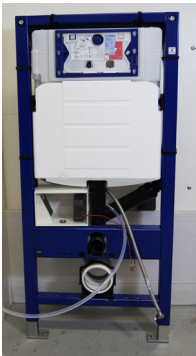

- Water inlet connected
- Drainage connected
- Power supply on standby

Provide a standby socket for a 230/12V transformer. Class II.

2 TRADITIONAL WALL CLADDING AND TILING OR HYGISEAT PANNELLING

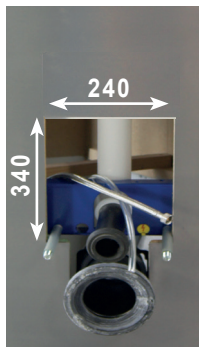

Connection access
Height 340 mm
Width 240 mm

Measurements taken from the 2 threaded rods.

3 INSTALLING THE MANUAL FLUSH CONTROL (Geberit instructions)



4 POSITION THREADED ROD 70 MM FROM FINISHED WALL



5 POSITION THE RECESS IN THE BOWL FIXINGS 90 MM FROM THE FINISHED WALL



6 MOUNTING THE PAN




Fix the bowl in place using the 2 set screws.

7 INSERTING HOLE COVERS



2 - SETTING UP THE TECHNICAL PANEL

7 INSTALLING THE PANEL

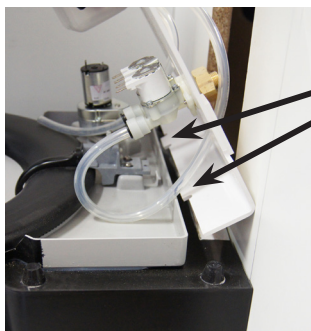

Insert the two tabs into the slots of the seat panel.

8 PREPARATION FOR WALL MOUNTING




CAUTION
do not
puncture
the tank

- Using a pencil, mark the placement of the 6 screws.
- Remove the panel and drill the holes.
- Put in the dowels.

9 ROUTING OF THE 12V CABLE THROUGH THE BACK OF THE PANEL



10 CONNECTING THE CABLE BETWEEN THE TANK AND PCB

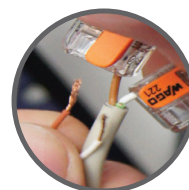

Connect the bare electrical wire to the cable with WAGO connectors at the back of the panel



Match the colours:
White - White ; Brown - Brown

11 CONNECTING THE HOSE TO THE QUICK CONNECT SOLENOID VALVE FITTING



12 CONNECTING THE WIRE BETWEEN THE TANK AND SOLENOID VALVE

Connect the wire with terminals to the wire connected to the solenoid valve.

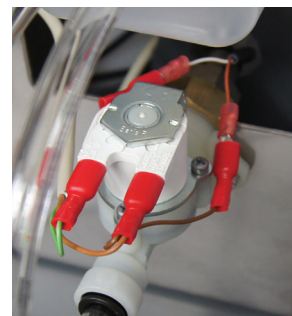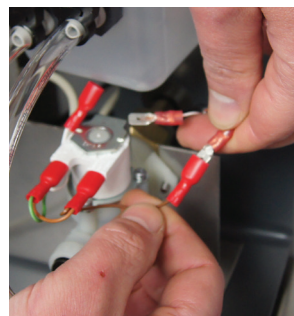


Match the colours:
White - White ; Brown - Brown

13 ADJUST THE VERTICAL POSITION OF THE PANEL AND SCREW IT TO THE WALL




3 - CONNECTIONS

14 CONNECTING THE 12V CONNECTOR

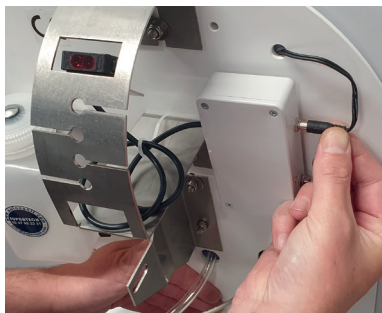

15 CONNECTING THE MOTOR WIRE WITH RED MARKING ONTO THE (RED) + TERMINAL

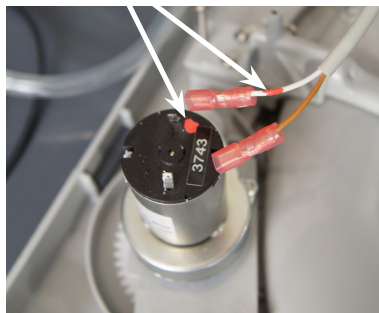

16 CONNECTING THE CLEANING STATION



- ✓ Pan inlet and outlet
- ✓ Solenoid valve water inlet
- ✓ Flush command
- ✓ 12V supply to PCB box and 230V connection on support frame side
- ✓ Cleaning station
- ✓ Installation of the manual flush command (Geberit instructions)
- ✓ Setting up the disinfectant
- ✓ ON switch
- ✓ Sensor tests
- ✓ Leak check

SUPRATECH

**INSTALLATION
ASSISTANCE**

00 33 (0)2 47 92 23 31



When powering up, switch to the ON position (indicated by 3 beeps) before placing the hood back on.

17 OPENING / CLOSING THE HOOD

1. Turn the triangle key.
2. Push the hood towards the wall.
3. Slide the hood vertically behind the panel, either upwards or downwards.

Be careful not to damage the toilet seat.



18 REPLACING THE DISINFECTANT SOLUTION

- Before opening the mixer, switch it OFF
- After closing the mixer, switch it back ON (= 3 beeps).



11.2024