


DOMINO urinal with integrated sensor

Reference: **S17B**


EN ISO 9001:2015



OPERATION


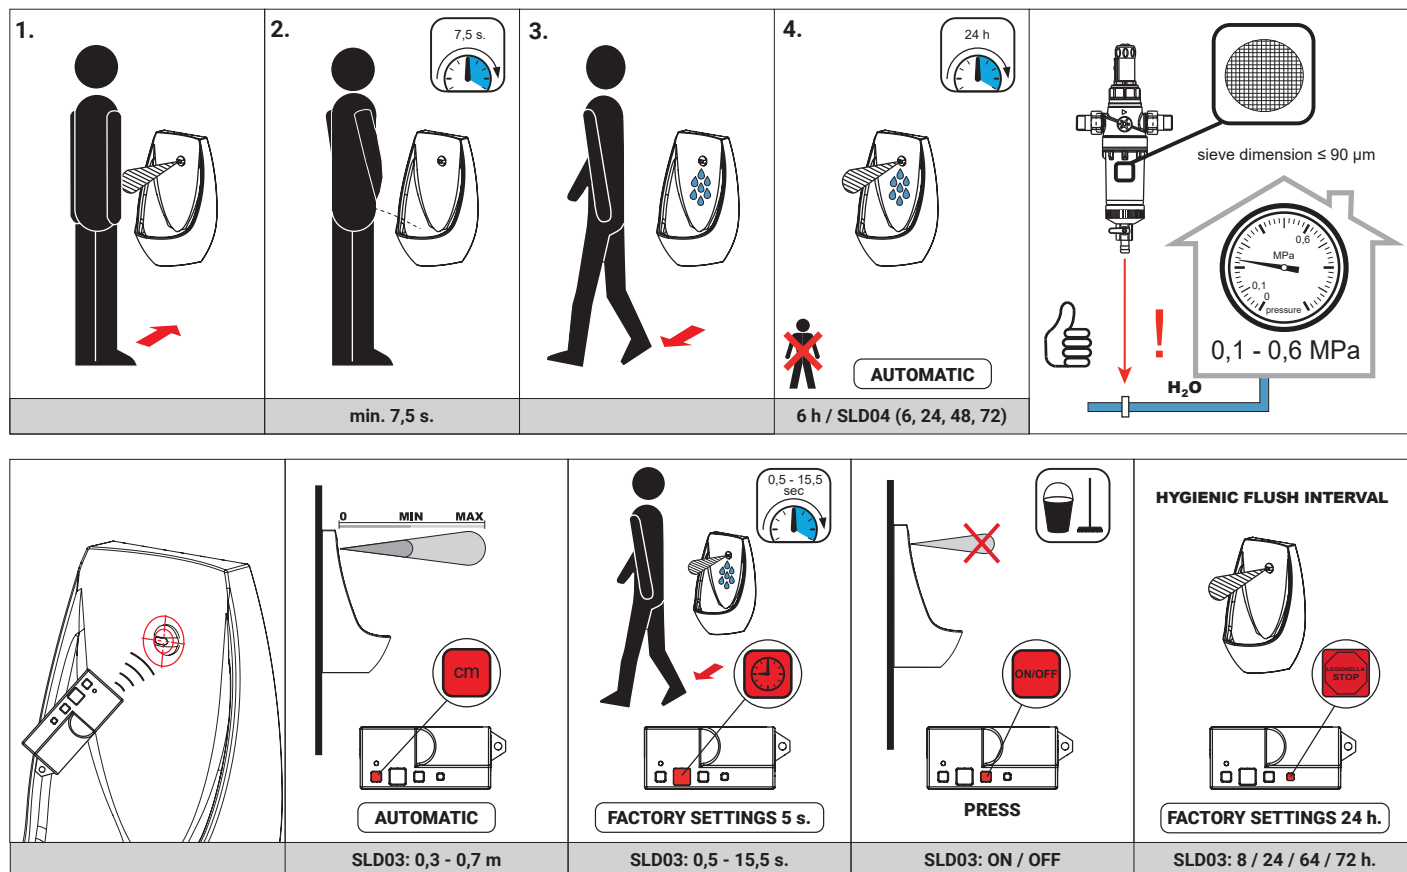


PACK CONTENT

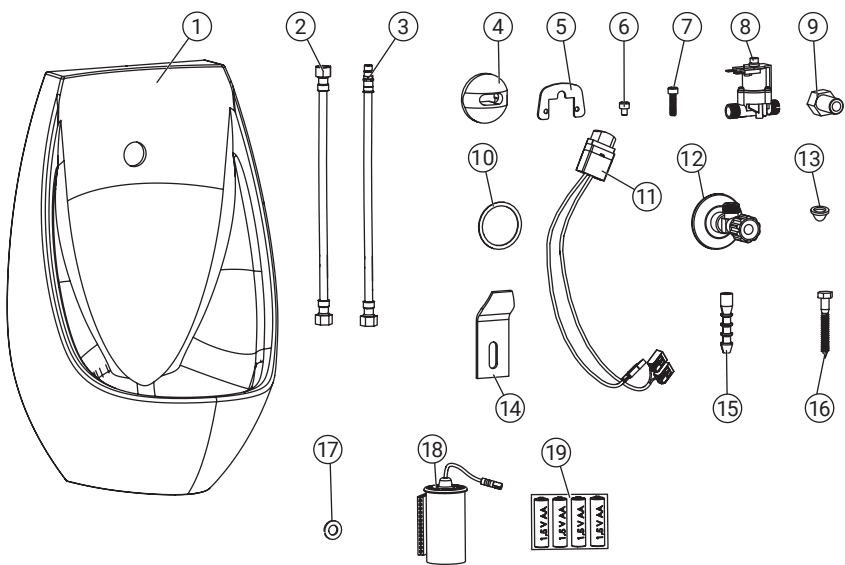

Part n°	Ref.	Quantity	Note
1	SAN452331	1	supplied assembled
2	SAN459951	1	
3	SAN445521	1	
4	SAN452371	1	
5	SAN463731	1	
6	SAN458161	1	
7	SAN459122	2	
8	SAN459351	1	
9	SAN461441	1	
10	SAN472381	1	
11	SAN461941	1	
12	SAN085401	1	
13	SAN462681	1	
14	SAN45258	2	
15		2	
16		2	
17		2	
18	SAN467411	1	
19	SAN063601	1	

DIMENSIONS







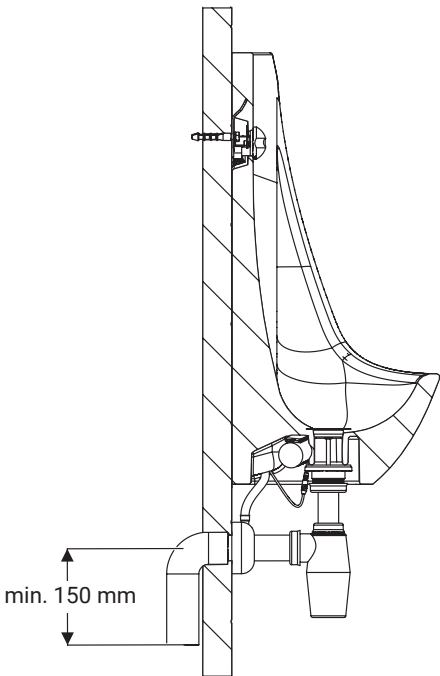
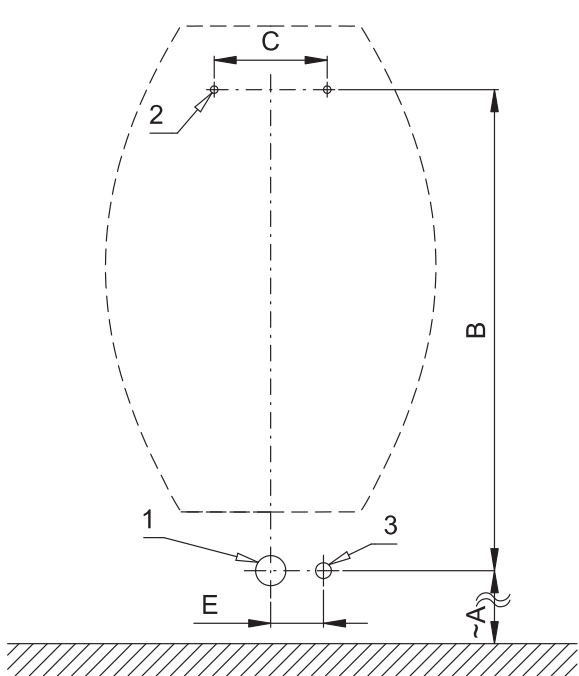


	A	B	C	D	E	F	G	H	I	J	K	L
mm	420	638	150		70							







- 1 - ø 40 mm waste outlet pipe
- 2 - Holes for urinal attachment
- 3 - G1/2" water inlet

"~A" for the height of the front edge of the urinal 650 mm above the floor.


INSTALLATION

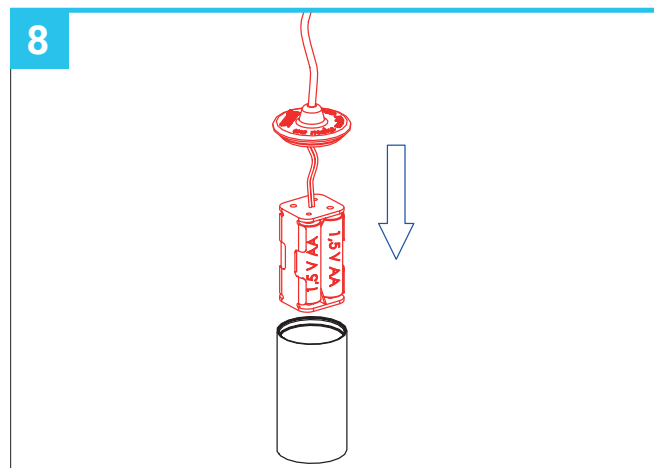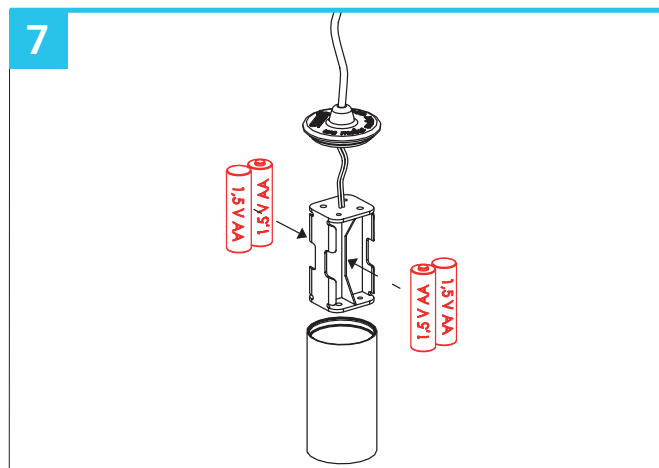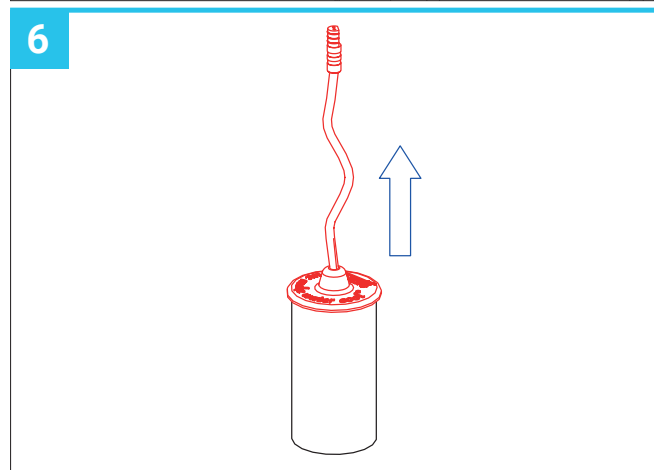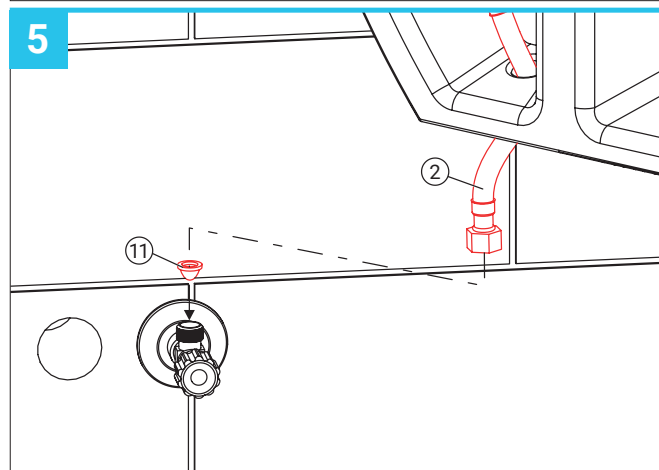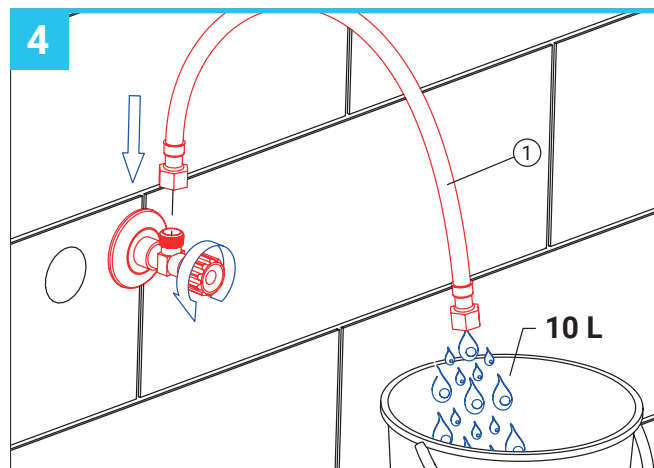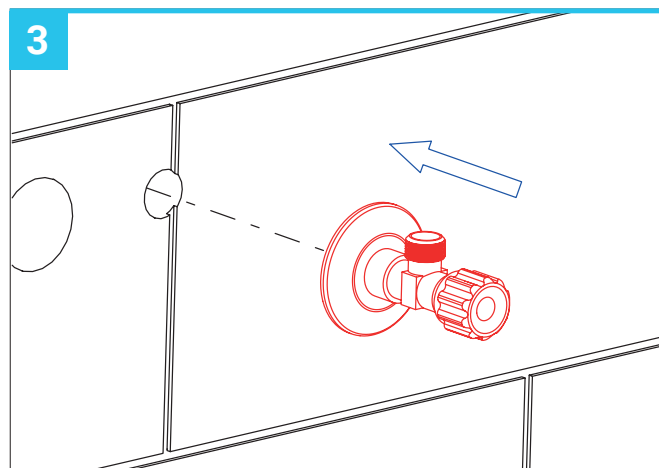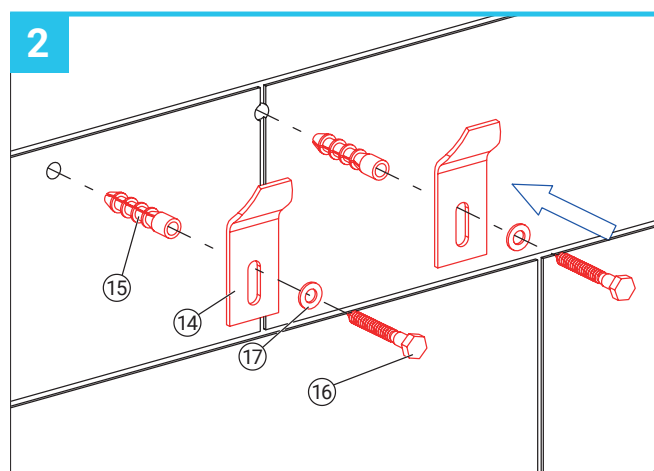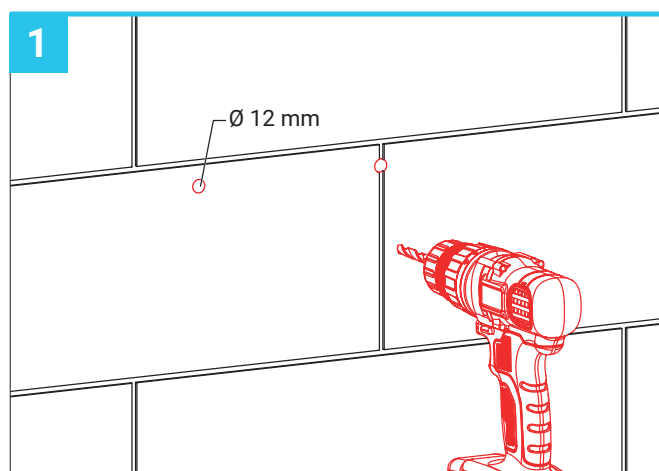

INSTALLATION

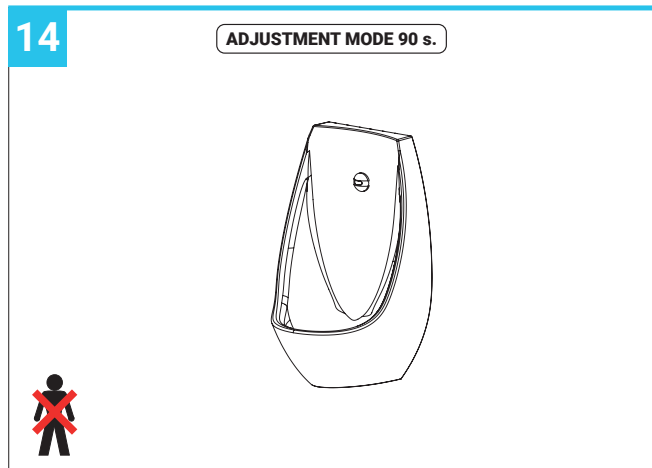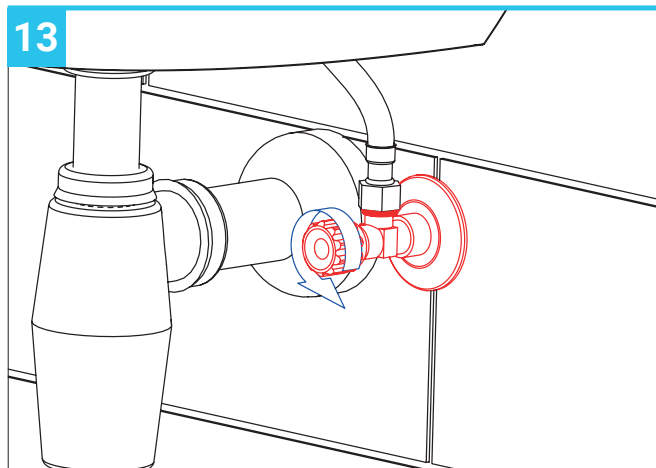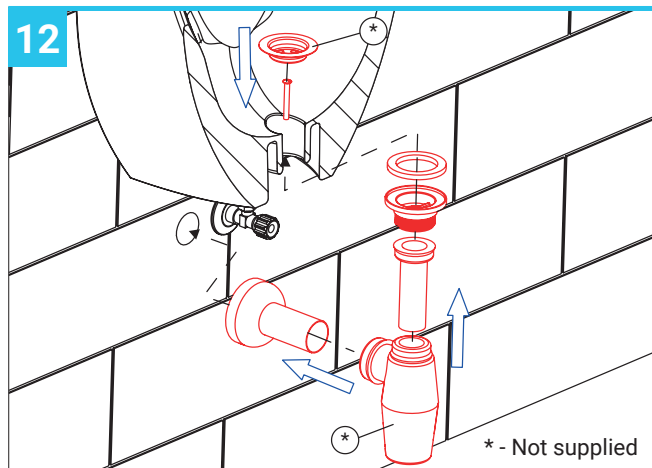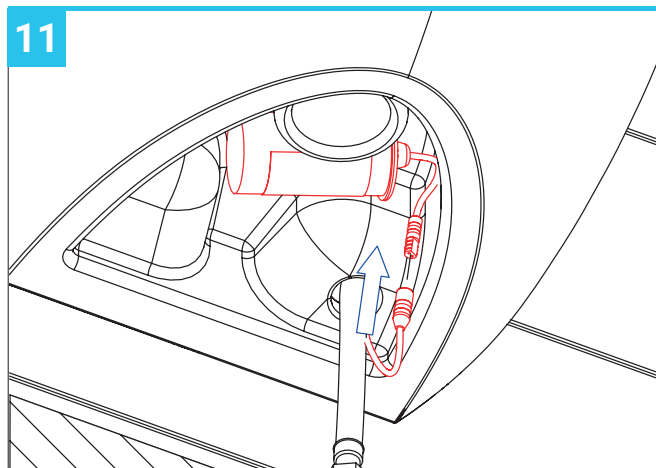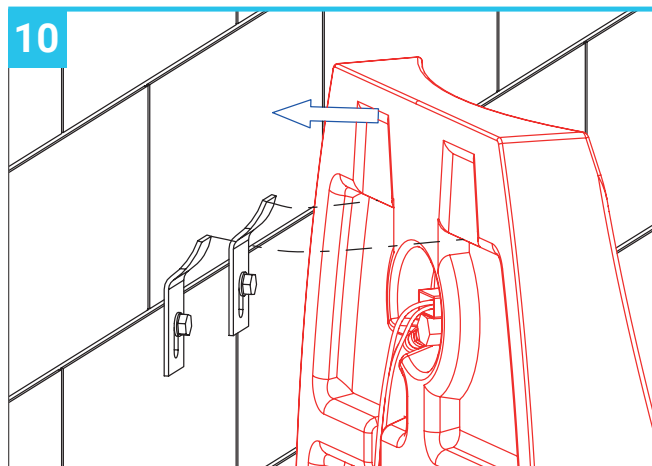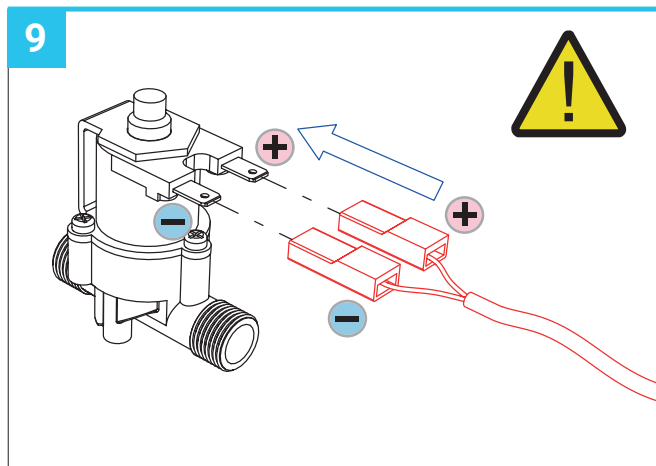

INSTALLATION

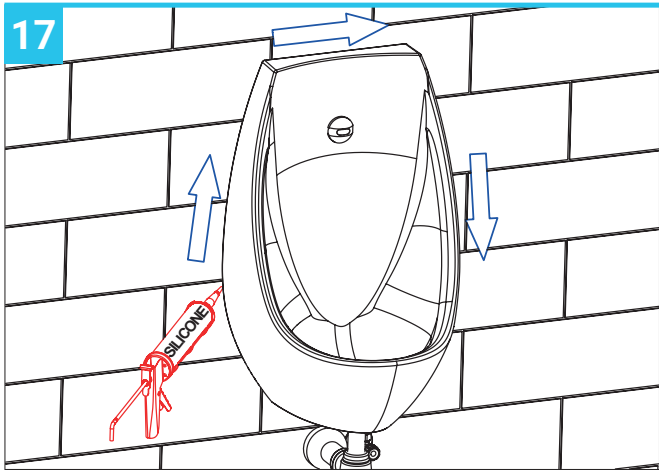

BATTERY CAPACITY CONTROL

	INDICATION	ELECTRONIC SYSTEM	BATTERY EXCHANGE
1 AA alkaline 1 AA alkaline 1 AA alkaline 1 AA alkaline 10 - 0 % capacity		ON	RECOMMENDED
1 AA alkaline 1 AA alkaline 1 AA alkaline 1 AA alkaline 0 % capacity		OFF	NECESSARY

MAINTENANCE

To keep the solenoid valve clean and working properly, it is recommended that the solenoid valve filter be checked for debris/dirt once a year.

It is also recommended that the screws and wiring are checked for tightness once a year.

Packaging should be disposed of in accordance with local laws and regulations.
The manufacturer declares that this product is in accordance with regulations 73/23 EHS and 92/31 EHS.

RECOMMENDED ACCESSORIES

- Ref. SLD03: Remote control for setting adjustments
- Ref. SLA36: Set of 4 pcs. alkaline batteries