

SUPRATECH

HYGIENE ON THE MOVE!



RONDEO

**FLUSH-MOUNTED ELECTRONIC
MIXER TAP**

INSTALLATION AND MAINTENANCE GUIDE

RONDEO flush-mounted electronic mixer tap

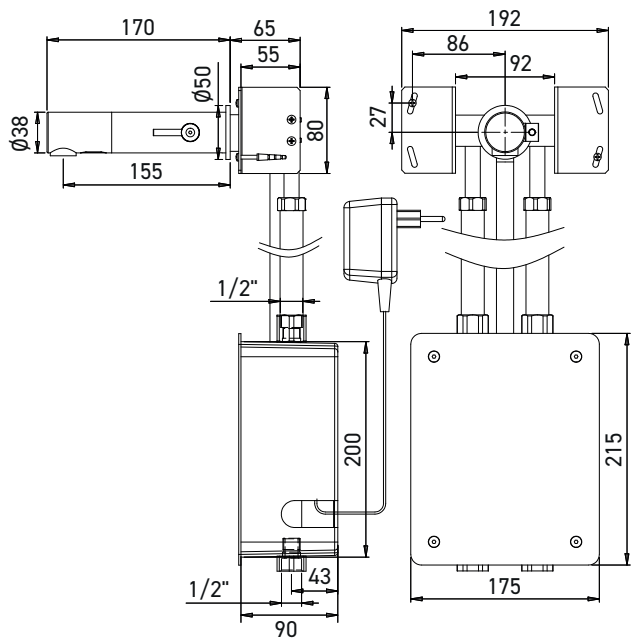
Ref. RES-24 / RES-25

INDEX

| | |
|--------------|----------------------------------|
| 3 | TECHNICAL CHARACTERISTICS |
| 4 | PACK CONTENTS |
| 5 | PRE-INSTALLATION |
| 6-9 | INSTALLATION |
| 10-11 | SETTING ADJUSTMENTS |
| 12 | MAINTENANCE |
| 13 | BATTERY REPLACEMENT |
| 13 | SPARE PARTS LIST |
| 14 | LIMITED WARRANTY |
| 15 | TROUBLESHOOTING |

The information in this document reflects products at the date of printing. SUPRATECH reserves the right, subject to all applicable laws, at any time, at its sole discretion, and without notice, to discontinue or change the features, designs, materials, and other specifications of its products, and to either permanently or temporarily withdraw any of the foregoing from the market. All information in this document is provided "as is" without warranty of any kind, either expressed or implied, including but not limited to any implied warranties of merchantability, fitness for a particular purpose, or non-infringement. SUPRATECH assumes no responsibility for errors or omissions in the information presented in this document. In no event shall SUPRATECH be liable for any special, incidental, indirect, or consequential damages of any kind, or any damages whatsoever arising out of or in connection with the use or performance of this information. The tradenames, trademarks, logos, and service marks presented in this document, including their design, are the property of SUPRATECH or other third parties and you are not permitted to use them without the prior written consent of SUPRATECH or such third party as may own them.

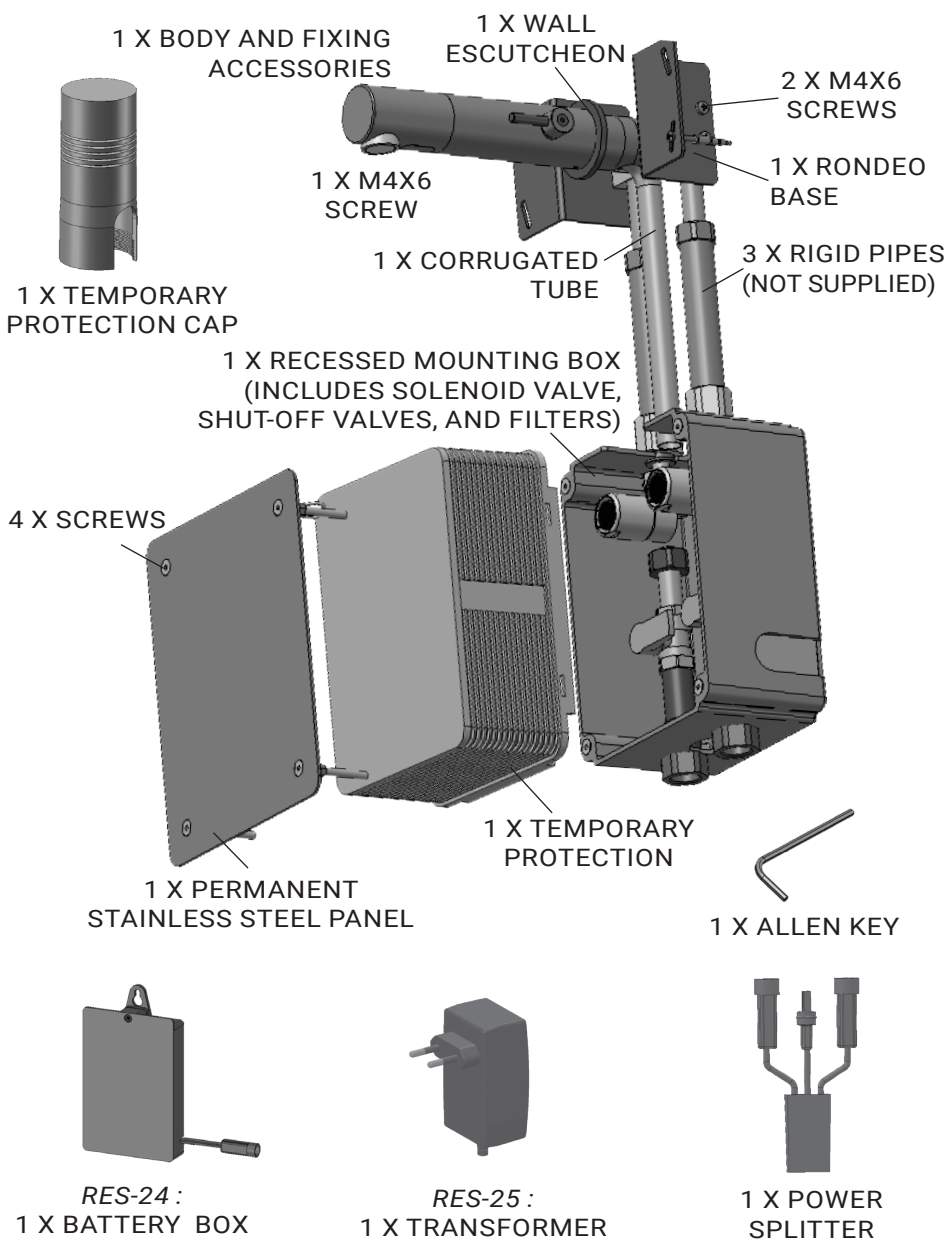
TECHNICAL CHARACTERISTICS



RONDEO WS Ref. RES-25
9V transformer

| | |
|----------------------|---|
| Power Supply | RES-24: 6x1.5V AA batteries RES-25: 9V transformer |
| Water pressure | 0.5-8.0 bars. If the water pressure exceeds 8 bars, use a pressure reducing valve |
| Minimum sensor range | 35 mm |
| Maximum sensor range | 300 mm |
| Security stop | After 90 seconds of uninterrupted use (adjustable with optional remote control) |
| Water temperature | Max 70°C |

PACK CONTENTS



PRE-INSTALLATION

CHECK CONTENTS

Separate all parts from the packaging and check each item using the PACK CONTENTS section. Make sure all parts are accounted for before discarding any packaging material.

Ensure you have all parts before attempting to install your electronic mixer.

PREPPING FOR INSTALLATION

Flush water supply lines thoroughly before installing the faucet.

Do not allow dirt, Teflon tape, or metal particles to enter the faucet.

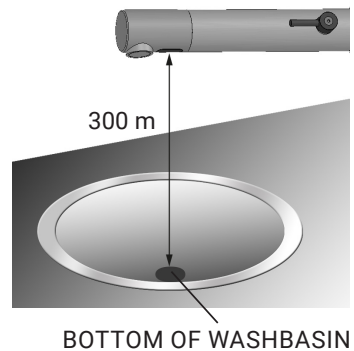
WARNING

To prevent reflection problems, it is recommended to keep a minimum distance of 300 mm between the bottom of the washbasin and the faucet.

IMPORTANT

This faucet model with infrared sensor pointing down, is not intended to be used with a washbasin of reflective material such as bright stainless steel.

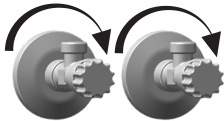
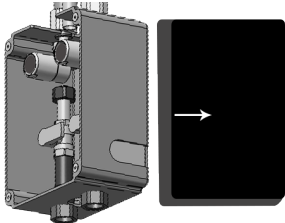
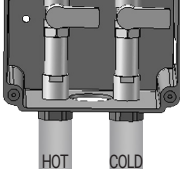
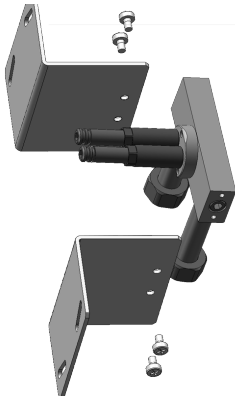
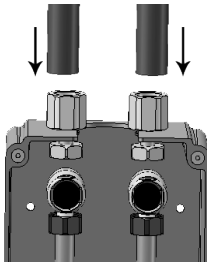
If the drain is straight below the faucet sensor, use a drain with a non-reflective finish (do not use a chrome plated one).



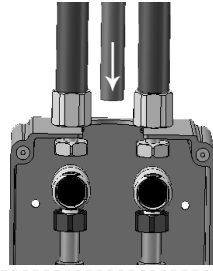
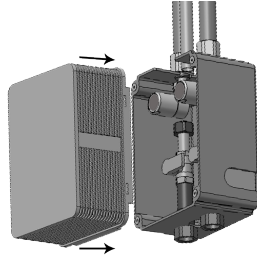
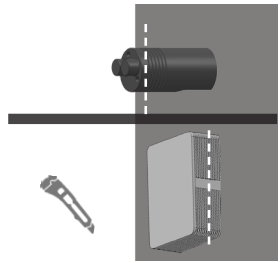
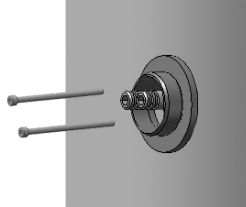
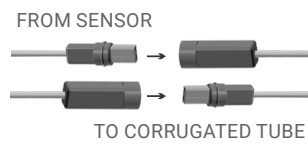
All plumbing is to be installed in accordance with local applicable codes and regulations.

INSTALLATION

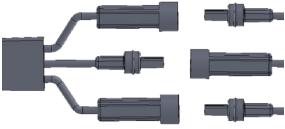
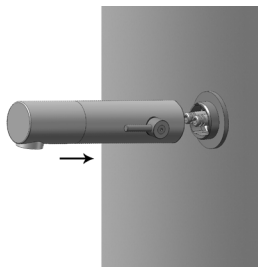
STEP 1 – INSTALLING THE FAUCET

| | | |
|---|--|---|
| 1 | Shut off the water supply. |  |
| 2 | Cut an adequate opening in the wall for the dimensions of the recessed mounting box, corrugated tube, rigid pipes, and the faucet base. Insert the mounting box through the opening in the wall. |  |
| 3 | Connect the water supply pipes to the fittings located at the bottom of the recessed mounting box. |  |
| 4 | Prepare the faucet base by assembling the brackets with the 4 supplied screws. Secure the base through the wall opening, using the 2 supplied screws and anchors. Place the temporary protection cap on the base of the spout. NOTE: Mind the MIN and MAX marks. |  |
| 5 | Connect the water outlet fittings from the recessed mounting box to the water inlet on the faucet base using rigid pipes (not provided). |  |

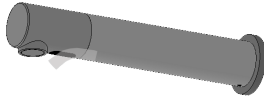

INSTALLATION

| | | |
|----|--|--|
| 6 | <p>Install the corrugated tube with the electrical cables between the faucet base and the box.</p> <p>If necessary, cut it to the appropriate length to suit installation needs.</p> |  |
| 7 | <p>Attach the temporary protection to the recessed mounting box.</p> <p>NOTE: Mind the MIN and MAX marks.</p> |  |
| 8 | <p>Once the electrical, plumbing and tiling work is complete :</p> <ul style="list-style-type: none">a. Cut the temporary protection at the appropriate groove at wall level.b. Cut the temporary protection of the recessed mounting box to the required thickness for the installation. |  |
| 9 | <p>Assemble the escutcheon onto the base and secure using the 2 supplied screws.</p> |  |
| 10 | <p>Connect the connectors from the spout to the corresponding connectors on the corrugated tube.</p> |  <p>FROM SENSOR</p> <p>TO CORRUGATED TUBE</p> |


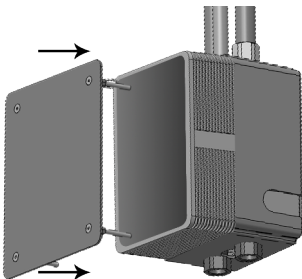
INSTALLATION

| | | |
|----|--|---|
| 11 | Connect the sensor connectors from the corrugated tube to the power splitter in the recessed mounting box. |  |
| 12 | Attach the spout to the wall escutcheon and secure it with the bottom screw using the Allen key. |  |

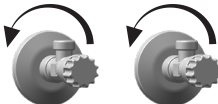

STEP 2 – CONNECTING THE POWER SOURCE

| | | |
|---|--|--|
| 1 | <p>Before proceeding, ensure no objects are below the sensor.</p> <p>Remove the protective sticker covering the sensor and move away from detection range.</p> |  |
| 2 | <p>Battery version:</p> <p>Connect the battery box connector to the sensor connector.</p> | |
| 3 | <p>Transformer version:</p> <p>Connect the sensor's waterproof connector from the corrugated tube to the transformer, then plug the transformer into the electrical socket.</p> |  |

INSTALLATION

| | | |
|---|---|--|
| 4 | <p>Wait about 10 seconds before putting your hands within the sensor range to avoid interfering with its settings.</p> |  ENVIRON 10 SECONDES |
| 5 | <p>Attach the permanent stainless steel panel using the 4 screws provided. Attach the battery box to the inside of the panel (wires at the bottom).</p> |  |

STEP 3 - CONNECTING THE WATER SUPPLY

| | | |
|---|---|---|
| 3 | <p>Turn on the water supply and check for leaks.</p> |  |
| 4 | <p>NOTE : RONDEO includes a special aerator that allows you to adjust the water stream direction in order to prevent water splashing if needed. To change the angle of the water stream, simply move the adjustable tilting plate by pressing down gently.</p> |  |
| <p>NOTE : Please refer to the 'Setting adjustments' section if the automatically set sensor range is unsatisfactory.</p> | | |
| | | |

SETTING ADJUSTMENTS



SETTING ADJUSTMENTS WITH THE (OPTIONAL) RES-31 REMOTE CONTROL

The ideal detection range will be set automatically.
If necessary, the sensor settings can be adjusted as follows:

Turn the water supply off.

To adjust the sensor using the remote control, hold the remote directly in front of the sensor at about 15-20 cm away.









Select the function you wish to adjust by pressing the corresponding button once.

After pressing the function button once, the blue LED on the sensor will flash quickly.

At this point, you can adjust the setting by pressing the (+) or (-) buttons, each press increasing and decreasing by one level.

When you have finished adjusting, open the shut-off valves.

SETTING ADJUSTMENTS

| | |
|---|---|
|  | <p>DETECTION RANGE: the detection range represents the optimum distance at which a person or hand must be placed to trigger the system. Press the RANGE button. Wait for the blue LED to flash on the sensor. Then press (+) to increase the range and (-) to decrease it.</p> |
| | <p>NOTE: even in the event of a power cut, once the detection range has been set using the remote control, it is memorised.</p> |
|  | <p>FLOW TIME OUT: the flow time out function allows the user to change the flow time after the user has moved their hands away from the faucet. A flow time close to 0 will save more water whereas an increased time will make the experience more comfortable for the user. Press the OUT button. Wait for the blue LED to flash on the sensor. Then press (+) to increase the flow time out or (-) to decrease it.</p> |
|  | <p>TEMPORARY OFF FUNCTION: faucets will remain shut for 1 minute when this button is pressed once. To cancel this function and to return to normal operations, press the ON/OFF button again or wait 1 minute.</p> |
|  | <p>SELF ADJUSTMENT MODE: make sure that no objects are in front of the sensor. Press the ADJ button. Wait for the blue LED to flash on the sensor. Remove the hand holding the remote control and move away from the detection range. The ideal detection range will be set automatically. Opening of the solenoid valve for 1 second to indicate that the adjustment is complete and the valve is ready for use.</p> |
|  | <p>SECURITY STOP: the security stop function prevents continuous running from the faucet, in the event of reflection or vandalism. By default, if the sensor is covered for more than 90 seconds, the water flow will automatically stop. To resume regular operation, all obstructions must be removed. Press the SEC button. Wait for the blue LED to flash on the sensor. Then press (+) to increase the security stop time or (-) to decrease it.</p> |
|  | <p>RESET: the RESET button restores all factory settings except for the detection range (to adjust the detection length, use the RANGE button). Press and hold down the RESET button and, at the same time, press the (+) button once.</p> |
|  | <p>COMFORT FLUSH: when the button is pressed, wait for one flash of the sensor's LED and the pre-programmed flush cycle will begin. The comfort flush feature cannot be interrupted or deactivated by pressing any button until it has finished.</p> |
|  | <p>24 HOUR HYGIENE FLUSH: to activate or deactivate the hygiene flush, press the clock button, and wait for a quick flashing of the sensor's LED. Then press (+) to activate or (-) to deactivate it.</p> |

MAINTENANCE

FILTER CLEANING INSTRUCTIONS:

This mixer is equipped with a stainless steel filter that prevents foreign particles from entering the solenoid valve (x2).

It is recommended to clean the filters every six (6) months.

If the water flow has decreased, this may be because the filter is clogged.

The filter can be cleaned as follows:

1. Close the shut-off valves.
2. Disconnect the water supply inlet from the solenoid box and remove the filter.
3. Wash the filter under running water.
4. Reassemble the parts.
5. Restore the incoming water supply.
6. Make sure that there is no water leakage.

SOLENOID VALVE SERVICING:

The solenoid valve diaphragm requires periodical cleaning every six (6) months.

Remove the diaphragm from the solenoid valve and examine it for dirt.

Do not attempt to dismantle the solenoid valve if you are unfamiliar with electronic solenoid valves.

CARE AND CLEANING OF CHROME AND SPECIAL FINISHES:

DO NOT use steel wool or cleansing agents containing alcohol, acid, abrasives, or the like. The use of any prohibited cleaning or maintenance products or substances could damage the surface of the faucet.

For surface cleaning use ONLY soap and water, then wipe dry with a clean cloth or towel.

When cleaning bathroom tiles, the faucet should be protected from any splattering of harsh cleansers.

If system chemical disinfection is practiced, chlorine can be used (calculated chlorine concentration of 50mg/l maximum in water per one hour dwell time) at service interval frequency.

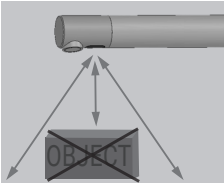
BATTERY REPLACEMENT

When the battery weakens, the blue indicator light will flash at a constant rate when the user's hands are within sensor range.

The battery should be replaced within two weeks.

Do not mix used batteries with new ones.

1. Carefully open the battery box by unscrewing the holding screw.
2. Open the box and remove old batteries.
3. Replace the used batteries with 6 new 1.5V batteries
(Lithium batteries recommended)
4. Close the box using the screw.



After changing the battery, move away from the detection area and wait 15 seconds for the ideal detection settings to be adjusted.



Once set, the water will run for 1 second to indicate that it is ready for use.

WARNING: Used batteries should not be disposed of with normal household waste. Contact your local authority for information on waste disposal and recycling.



SPARE PARTS LIST

| | |
|---------------------------|-----------|
| Seals and screws kit | S07210076 |
| Stainless steel panel kit | S07040119 |
| Sensor kit | S07220160 |
| Solenoid valve kit | S07231010 |
| Fittings kit | S07246002 |
| Diaphragm | S04500001 |
| Mixer handle kit | S07260007 |
| Battery box | S06530008 |
| Remote control (option) | RES-31 |

LIMITED WARRANTY

This mixer tap is warranted for 3 years from the date of purchase.

In the event of a defect during this period of regular use, SUPRATECH will, at its discretion, repair, provide a replacement part or product, or make appropriate adjustments.

SUPRATECH will not be responsible for labour, installation or other additional costs or indirect costs other than those specified above. In no event shall SUPRATECH's liability exceed the purchase price of the product.

This warranty does not cover breakdowns due to incorrect installation and maintenance, normal wear and tear, battery, or water composition.

This warranty does not cover product damage caused by the following:

- Incorrect installation, inversion of supply pipes.
- Pressures or temperatures exceeding recommended limits.
- Improper manipulation, tampering, bad or lapsed maintenance.
- Foreign bodies, dirt or scale introduced by the water supply.
- Vandalism.

Failure to comply with the safety precautions and/or installation recommendations described in this installation guide will void the warranty. For all warranty claims, contact your Plumbing contractor, Dealer or SUPRATECH.

Please be sure to provide all pertinent information regarding your claim, including a complete description of the problem, the reference and model number, proof of purchase, and the installation date.

TROUBLESHOOTING

| PROBLEM | INDICATOR | CAUSE | SOLUTION |
|-----------------------------|--|---|--|
| No running water | The sensor's LED flashes continuously when the user's hands are within detection range | Low battery. | Replace battery. |
| | | | |
| | 2. The sensor's LED does not turn on when the user's hands are within detection range | 1. The range is too short. | Increase range. |
| | | 2. The range is too long. | Decrease range. |
| | | 3. Battery is used up. | Replace battery. |
| | | 4. The unit is in "Security Mode".* | Eliminate cause of reflection. |
| | | 5. Sensor is picking up reflections from the washbasin or from another object. | |
| | 3. The sensor's LED flashes once when the user's hands are within detection range | 1. Faulty connection/ wiring between sensor and solenoid valve. | Re-connect sensor and solenoid valve properly. |
| | | 2. The water supply pressure of the faucet is greater than 8 bars. | Decrease water supply pressure or use pressure reducing valve. |
| | | 3. The water supply pressure is under 8 bars yet the pressure in the faucet's body is higher. This situation maybe be due to a sudden increase in the water supply pressure that the back check prevents from dropping. | Shut off water supply and unscrew the flexible hose in order to reduce the pressure blocking the faucet. |
| Water does not stop running | 1. The sensor's LED flashes once when the user's hands are within detection range | 1. Dirt or scale in the diaphragm. | Clean the opening or replace the diaphragm. |
| | 2. The sensor's LED does not flash when the user's hands are within range | 1. The sensor is dirty or obstructed.** | Clean or remove obstructions. |
| | | 2. The sensor is picking up reflections from the washbasin or fom another object. | Decrease detection range or eliminate reflection source. |
| Weaker water flow | | Filter or aerator is clogged. | Remove, clean, or re-install. |

* Security Mode: if the sensor is covered for more than 90 seconds, the faucet will automatically stop the water flow as a security measure. To resume normal operation, remove any obstructions.

** In this case, the water flow will automatically stop after 90 seconds due to "Security Mode".

SUPRATECH

AUTOMATED SYSTEMS - SANITARY ACCESSORIES - STAINLESS STEEL SANITARY WARE

2, rue des Cyprès - 37240 Bossée - France

Tel: 00 33 (0)2 47 92 23 31 - Fax: 00 33 (0)2 47 92 84 71

info@autosanit.com

www.autosanit.com

